

**Lower Neck Bearing Puller Set** includes cross arm puller, rods and lower puller claw. Simply remove roller from old bearing, install claw and turn puller.  
**VT No. 16-0073**



**Fork Bearing Installer Tool** fits over 1" stem allowing bearing to be "driven" on.  
**VT No. 16-0724**



**Hex Top Fork Nut Socket** has 3/8" drive, rubber protector on inside for Glide Forks, 35mm. By Jims.  
**VT No. 16-0670**



**Socket Wrench** is designed for easy removal and installation of stock 1 3/8 hex flat top fork tube plugs. Installed O-Ring eliminates damage to top of plug. Black oxide.  
**VT No. 2317-1**



**Fork Tube Spring Retainers and Pin Wrench Kit** includes 2 retainers for 1952-72 XL and pin wrench for installation removal of retainers.  
**VT No. 7700-3**



 
**FXSTS Fork Stem Bearing End Play Setup Wrench. Offset Handle** allows for proper clearance of fuel tank and other accessories.  
**VT No. 16-0444**



16-1768



16-0895



16-1766



16-0065

**Steering Head Bearing Tools** fit 1988-up FXST, 1982-up XL, 1992-up FXDB-FLT to remove or install races.

VT No.	Item
16-1768	Remover
16-1766	Installer
16-0065	Driver Handle for A
16-0895	Driver Handle Adapter, 1992-up FLT-FXD




**Fork Stem Nut Wrench** fits FLT.  
**VT No. 16-1977**



**Fork Pre-Load Assembly Tool** allows pre-load to be set on 41mm forks during assembly.  
**VT No. 16-0745**

## Fork

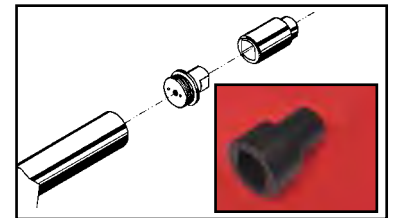

**Fork Tube Plug Tool** has a special socket which fits 1948-up Glide Fork Plug, 1/2" drive.

VT No.	Brand
16-0630	V-Twin
16-1008	Jims



16-1009

**Fork Spring Compressor Tool** puts pressure on top fork plug to compress spring to ease in assembly.

VT No.	Type
16-1009	Jims
16-1025*	Jims

\*Note: Use with 16-1009 for extended length fork tubes.



**Fork Cap Wrench.**  
**VT No. 16-1034**



**Fork Tube Assembly Stand Tool.**  
**VT No. 16-2600**

## Fork Seal Drivers



**Fork Seal Driver** for 41 mm bushing and seal installation.  
**VT No. 16-0557**



**Seal Driver Kit** quickly installs seal without damage, includes 16 adapters for seals up to 3 3/8" diameter. Includes special adapters for "shielded" seals.  
**VT No. 16-0069**



**Bearing Race and Seal Driver** includes driver handle and 6 machined aluminum collets to fit most bearings.  
**VT No. 16-0505**



16-0055



16-0056



16-0964

**Fork Seal Installer.** Installs bushing and seal without damaging components.

VT No.	OEM	Use
16-0055	34190	1983-up FXRT 1983-up XR 1984-up FX-XL
16-0056	34634	1984-Later FLT-FXWG
16-0964	36583	1987-up FXR-FXRS, 88-up XL



**49mm Fork Seal and Dust Shield Installer Tool** installs the lower leg 49mm fork seal squarely into the bore with no damage to the lip seal surface. Also installs dust shield cover. It is a two-price design to aid in some assembly applications.  
**VT No. 16-1369**



**Adjustable Split Fork Seal Driver Set** use on all 35mm, 39mm and 41mm forks. Includes seal drive and three seal guides.  
**VT No. 16-0074**



**Duo-Glide Nut Double Ended Wrench** used for removing and installing crenulated nuts and dust covers with internal thread.  
**VT No. 16-1344**