



# Shock for FXST-FLST



**Chrome Billet Shock Sets** fit 1989-99 Softail models. Smaller diameter allows more clearance for custom installation.  
**VT No. 54-0131**



**FLST-FXST Shock Stud Kit** includes 4 bolts and 4 washers.

VT No.	Finish	Year	Mount Studs not included with shock sets.
37-9090	Zinc	1989-99	
37-0572	Chrome	1989-99	
37-0475	Chrome	2000-up	

## Shock Tool



**Dual Shock Tool** fits 1989-up FXST and 79-up FX-XL.  
**VT No. 16-0954**



**1989-up Softail Shock Tool** for use with 3/8" ratchet drive.  
**VT No. 16-0917**

## Lowering Kit for Softail



**E-Z Adjustable** is fully adjustable shock link for Softails. Left hand threaded design allows adjustments in small increments from stock to the drop of your choice. Adjustment is accomplished with open end wrench. Shock must be disassembled. Fits OEM and aftermarket shocks.

VT No.	Year
54-0433	1984-88
54-0434	1989-99



**Adjustable Softail Shock Mount** is for all 2000-up models. Installs on the stock shock and offers easy adjustment from stock ride height to two inches lower.  
**VT No. 54-0535**

Mount Studs not included with shock sets.



**AEE Chrome Adjustable Shock Assemblies** feature full chrome finish with up to 1 1/2" lowering capability.

VT No.	Years
54-0161	1989-99
54-0162*	2000-up

\*Note: These do not lower the motorcycle, these are standard Softail shocks.



**Adjustable Chrome Shock Sets** for Softail models. Order bolt kit separately.

VT No.	Year	Item	Finish
54-0105	2000-up	Shock Set	Chrome
37-0476	1989-99	Bolt Set	
37-0475	2000-up	Bolt Set	





**Softail Shock Spanner** replaces 94555-89.  
**VT No. 16-0748**



**Lowering Kit** allows 1.5" lowering. Fits 2000-up Softail.

VT No.	Brand
54-0520	AEE
54-0538	ET

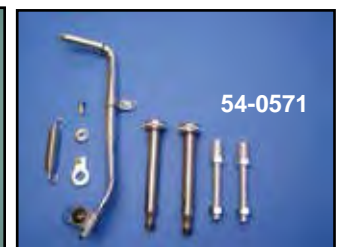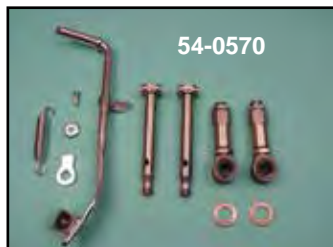

**"Full" Lowering Kits** include components to lower the front and rear of Softail models. Each kit includes shorter damper rods, 1" shorter kickstand and adjustable rear shock lowering set. The front of the FXST is lowered 2.5" and 2" on FLST models. Rear is adjustable up to 1.5" on 2000-06 models and up to 2" lower on 1989-99 models, using stock shocks.

VT No.	Year
54-0570	1989-99
54-0571	2000-06