



Glide Riser




25-2175
Replica 1949-59 Big Twin Riser Kit includes two chrome post risers with zinc plated caps, chrome riser link with four studs and acorn nuts, two rubber bushings, two screws and two flex lock nuts as pictured.

VT No.	Item
25-2175	Kit
25-2117	Riser with bushing and top clamp
37-8820	Bolt Only
37-9149	Flex Nuts




49-0417
Chrome Riser Link fits 1949-60 FL and has 4^{3/4}" center to center mounting holes.

VT No.	Use
49-0417	Top Clamp
37-8810	Four Studs and Four Acorns, Set

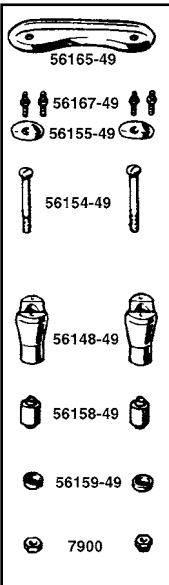

25-2117
Chrome Early Style Glide Risers feature rubber bushings for use on 1949-59 models of FLH. Order top riser link separately.

VT No.	Item
25-2117	Riser and Top Chrome Set
25-2137	Replica Early Style Zinc Top
37-8820	Bolts, pair with nuts
25-2137	Tops, Zinc, pair
25-2212	Tops, Chrome, pair
28-1949	Rubber Washer, pair
37-8810	Kit, 4 pc Rubber Bushing, pair
28-1950	Rubber Washer only, pair
28-2223	.007 Oversize Rubber Bushings, pair
37-8810	Acorn Nuts with Stud Set

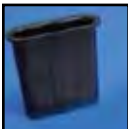

28-0222
Control Cable Guide replaces 56600-49 on 1949-60 FL's to prevent cables and wiring from abrasion on top triple tree. Guide has black plastic construction.

VT No. 28-0222



Stock Type Risers are original tapered type, through bolt design, chrome steel. Bolts not included. ***Note:** Feature rubber Iso-inserts, and 5/16" acorn nuts.

VT No.	Rise
25-2171	3"
25-2129	4", Threaded
25-2173	5"
25-2130*	5"
25-2176*	3"
25-2220	3"
25-2250	3"



25-2134
Black Handlebar Clamp fits 1960-78 FL. **VT No. 25-2134**



24-0250
Handlebar Clamp Cover replaces original type FLH 1960-84 Wide Glide Forks.

VT No.	Year	Type
24-0250	1960-79	Chrome Smooth
24-1862	Black	As Above
24-0281	1960-79	Polished Smooth
24-9963*	1960-79	Chrome with Damper Hole
24-0330	1980-84	Chrome Smooth
37-8701	1960-84	Chrome Screws for Above
37-8701T	1960-84	Chrome Screws for Above

***Note:** Uses 24-0202 damper kit.

Bushing



28-1949
Handlebar Riser Bushing Kit includes two bushings and two washers for 1949-72 FL. The 1960-72 FL requires VT No. 26-2121 for solid type mounting.

VT No.	#	Note	Years	Item
28-1949	A-B	Kit	1949-59	Four pieces
28-1950	B	Pair	1949-59	Two washers
28-2121	A	Pair	1949-72	Two bushings
28-2223	A		.007	Oversize
26-2121	C	Set (4)	1960-72	Bushings Steel



25-2102
Solid Handlebar Mount Adapter Kit eliminates the flex style stock rubber mounts. The addition of this kit gives a solid mount handlebar setup.

VT No.	Fits
25-2102	1962-up
25-2103	1973-up