




# Fender Tip and Trim

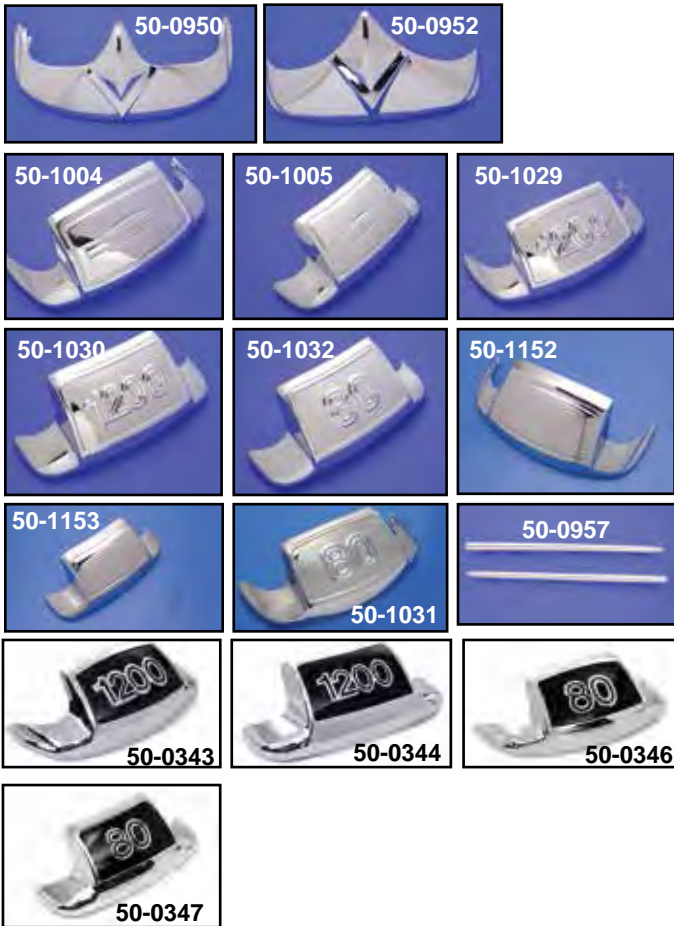

Die Cast Chrome Fender Tips fit 1958-84 FLH. Order the side rails separately.

Front	Rear	Years
50-0950	50-0952	1959-66
50-1004	50-1005	1967-72
50-1029	50-1030	1978-79
50-1031	50-1032	1980-84
50-1152	50-1153	1980-84
	50-1191	1980-84
Painted Inlay		
50-0343	50-0344	1200 cc
50-0346	50-0347	80"
Stainless Side Rails		
50-0957		1967-up




**Lower Fender Trim** includes screws except 50-1015. Fits 1949-84 FLH.

VT No.	Type
50-1003	Smooth
50-1009	Ribbed
50-1132	Flame
50-1133	Smooth
50-1015	Smooth
37-1508	Screw Kit



**1936-58 Fender Tips.** Order the side rails separately.

VT No.	Type	Year	Finish
50-0953	Front	1949-58	Stainless
50-0955	Front	1935-46	Chrome
50-0956	Rear	1935-46	Chrome
50-0954	Rails	1949-56	Stainless
50-0951	Rails	1957-66	Stainless
50-0531	Rails	1957-up	Chrome
37-8784	Set	Four T-Bolts and Four Nuts	

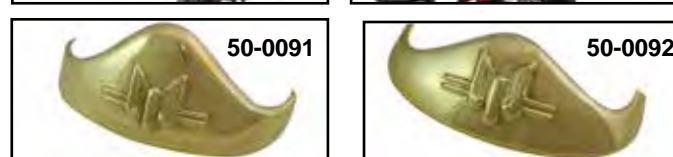

**1936-48 Fender Tips.**

Chrome	Brass	Type
50-0047	50-0091	Rear, Rocket Style
50-0048	50-0092	Front, Rocket Style




**Chrome Fender Tips** in stamped steel. For 1934-57 front or rear fenders.

VT No.	Style
50-0999	Smooth
50-0916	Eagle



**Chrome Fender Tip Set.** Tips attach by 2 studs on each tip. Installation requires drilling of holes in fenders. Order side rails separately. VT No. 50-0504



**Rear Fender Wiring Loops.** Set of 3. VT No. 50-0339

CLASSIC