




Rear Frame Stand

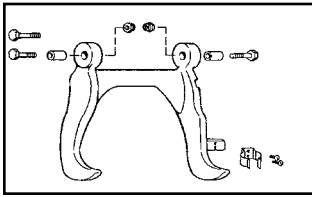


Center Stand for 1958-84 Big Twins. Features natural finish aluminum construction, with bushings and bolts. Replaces 49400-59A.

VT No.	Item
49-0928	Stand Complete
37-9306	Bushing Only
2744-10	Mount Kit



Chrome Front Stand not for use as ride off. Fits 1965-84 FLH.
VT No. 16-1111

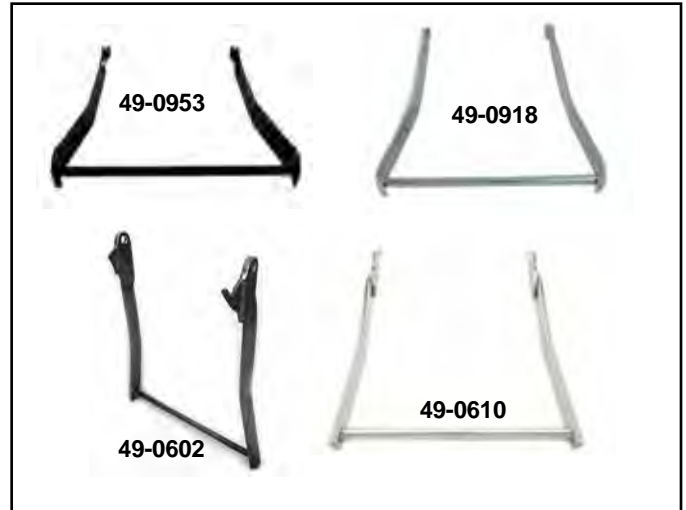

Rear Frame Stands for Rigid Big Twin. Order stand catch and mounting hardware separately. VT No. 49-0602 is of tubular shape material.


VT No.	Year	Model	Finish
49-0953	1938-57	Big Twin	Black
49-0033	1941-57	Legs Only	Raw
49-0918	1938-57	74 and 80	Chrome
49-0602	1936 and 1937	Big Twin	Black
49-0610	1936-37	Big Twin	Chrome

Caution: Not intended for use as a ride off stand.

Side Cover



FLH Left Side Covers for belt and chain drive models. Covers left side and oil tank. Includes brackets, knobs and hardware. fits 1982-84 FLH.
VT No. 42-9931



Chrome Knurled Knobs for attaching side cover or battery tops on FL models. Sold in pairs. Fits $\frac{5}{16}$ - 18" Thread, $1\frac{1}{2}$ outer diameter
VT No. 37-8873




Chrome Engine Air Scoop will force air to rear cylinder. Mounts to left side of 1966-84 Big Twin Shovelhead. Brackets are included.

VT No.	Item
42-0317	Kit
31-1025	Brackets



Chrome FLH Starter Relay Cover Kit includes hardware. Replaces 66425-68. Use on 1965-84 FL-FLH.


VT No.	Style
42-0313	Smooth
42-0553	Gold Inlay Spirit

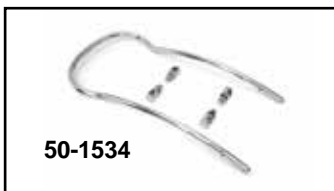

Chrome Front Fender Rail for 6" front fenders. 1936-52.
VT No. 50-1534

Mounting Hardware fits all models with rear stand.

VT No.	Year	Finish
8840-10	1930-35	Parkerized
2910-6	1936	Parkerized
8841-10	1936-37	Parkerized
8015-4	1938-57	Parkerized
9616-4	1938-57	Chrome
51-0479	1936-57	Tab Set

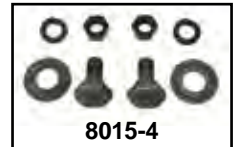

74 and 80 Stand Catch. Replaces 49580-36.

VT No.	OEM	Finish	Year
31-0186	49580-36	Parkerized	1936-46
31-0480	49580-36	Chrome	1936-46
31-0370	49580-36	Black	1936-46
31-0853	49580-36A	Parkerized	1947-57