

Flywheels



Complete Flywheel Assembly is shipped complete, assembled and trued with shafts.

VT No. OEM Fits Type 10-1130 23900-57A 1957-76 XL Motor Shop **10-1010** 23900-75 1977-80 XL S&S **10-1131** As Above Motor Shop Ready

Motor Shop Ready



10-1132 23900-75B 1981-85 XL

S&S Rods are heavy duty replacement rod sets included wrist pin bushings, rod races, matched rods, pins, rollers-cages, and nuts, for stock or stroker use. Use "Heavy Duty" or "Supreme" which is recommended for drag strip applications.

 Heavy Duty
 Supreme
 Fits

 10-0179
 10-0191
 1957-81 XL

 10-0180
 10-0194
 1981-85 XL

10-0187 — 1986-99 XL-Evolution 883-1200





A. Timing Plug fits all Sportster timing plug holes and oil tanks.

VT No. Finish 8610-1 Chrome 8611-1 Cadmium

B. Allen Style Plug use on all 1970-up replaces 720.

9402-1 Chrome **9403-1** Cadmium

37-9206 Chrome by Gardner-Westcott

9960-1 Chrome (Oversize)



Truett & Osborn Flywheel Sets feature original weight right and left sides.

VT No. Fits 10-1012 1957-80 TRUETT & OSBORN 10-1030 1981-85

Case Bolts



Engine Case Bolt Kit includes the necessary hardware to bolt together the motor cases of the years listed in cad plated finish.

VT No. Fits 9878-13 1957-76 **9879-31** 1977-90



 Rear Engine Case Studs. Set of 3.

 VT No.
 OEM
 Years


 12-1151
 24817-52
 1952-81

 12-1150
 24825-82
 1982-90



Chrome Engine Case Allen Bolt Kit fasten engine case halves. Fit 2004-up.

VT No. 2217-8

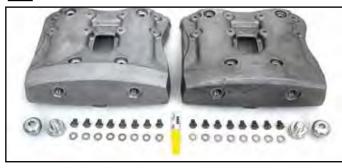

Shovelhead Style Rocker Boxes for 2014-up Sportster. Cast finish. left.

VT No. 43-1096