

All shocks are measured eyelet to center of eyelet.

Shock Set



AEE Series Chrome Shocks feature an adjustable spring pre-load nitrogen charged with multi-stage automatic damping in a black body with chrome spring and end caps. **Note:** When installing replacement shocks on 1978-00 XL models, it may be necessary to modify or space the chain guard/belt guard to allow proper shock clearance.

***Note:** Denotes stock length shock. When installing other than stock length shocks, tire to fender clearances must be checked.

Year	Model	11"	11.5"	12.5"	13	13.5"	14.25
1980-06	XLH 1200,	54-0020	54-0021	54-0022	54-0023	54-0024*	54-0025
	XLH 883 Hugger	54-0020	54-0021	54-0022*	54-0023	54-0024	54-0025
1988-03	XLH 883	54-0020	54-0021	54-0022	54-0023	54-0024*	54-0025
1979-87	XLX-XLH-XLS	54-0020	54-0021	54-0022*	54-0023	54-0024	54-0025
1954-78	XL	—	—	—	—	54-0027	—



Shock Set



Progressive Suspension 412 Series Chrome Shocks are manufactured from the finest material available. Magnum 412 Series shocks are nitrogen charged with six-stage automatic damping and an adjustable spring preload. Available with chrome spring and end caps, shock cartridge is not chrome. All shocks are measured eyelet to center of eyelet.

Note: When installing replacement shocks on 1978-00 XL models, it may be necessary to modify or space the chain guard/belt guard to allow proper shock clearance.

***Note:** Denotes stock length shock. When installing other than stock length shocks, tire to fender clearances must be checked.

Year/Fits	11.0"	11.5"	12.5"	13.0"	13.5"	14.2"
1988-03 XLH 1200	54-0093	54-0033	54-2000	54-2001	54-2002*	54-0059
1988-03 XLH 883 Hugger	54-0093	54-0033	54-2000*	54-2001	54-2002	54-0059
1988-03 XLH 883	54-0093	54-0033	54-2000	54-2001	54-2002*	54-0059
1979-87 XLX-XLH-XLS	54-0093	54-0033	54-2000*	54-2001	54-2002	54-0059
1953-78 XLH-XLCH	—	—	—	—	54-2009	54-2003



Mount Studs not included with shock sets.



Progressive Suspension 440 Series Chrome Shocks feature two rebound damping circuits and are available in standard for the average single rider, heavy duty for touring or carrying passengers. Fit 1977-02.

Standard	Heavy	Size
54-4005	54-4022	11.0"
54-4006	54-4011	11.5"
	54-4050	12.0"
	54-4001	12.5"
54-4009	54-4003	13.5"

Lowering Kit

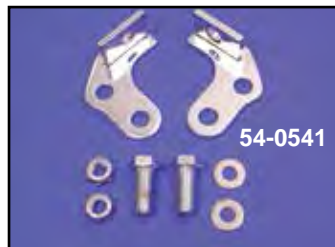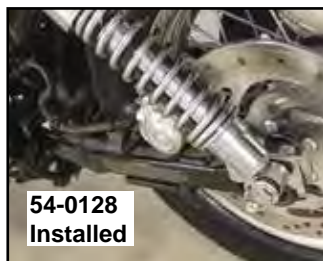

1" Rear Shock Lowering Kits.

VT No.	Fits	Finish
54-0510	1989-99	Black
54-0523	2000-03	Black
54-0511	1982-85	Black
54-0541	2000-03	Chrome
54-0542	1989-99	Chrome
54-0127	2005-up	Black
54-0128	2005-up	Chrome

Warning: Installing a lowering kit or shorter shocks will decrease initial ground clearance. The motorcycle will be lower to the ground and care should be taken to avoid bottoming, especially over bumps or in turns.

XL