




Hi-Way Bar for XL

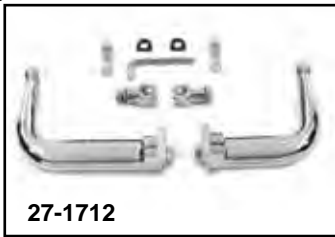

Adjustable Hi-way FootPeg Kit for XL models with mid mount brake and shifter controls. Adjusts quickly into 3" height positions and can be used with engine guard. Order soft pegs separately, 27-1582.

VT No.	Fits
27-1712	1984-2003
27-1728	2004-up



Hi-way Bars for Evolution Sportster. Chrome pair mounts to front motor mount factory style. Includes O-Ring pegs for 1985-2003 883-1100-1200.

VT No.	Type
27-0611	O-Ring Style
27-1630	Cats Paw Style




1984-2003 Forward Footpegs for Sportster. Chrome one piece design, bolts to motor mount bolts for firm mounting, features O-ring pegs for all 883, 1100, and 1200cc. VT No. 27-1572



Hi-Way Bar Kits include chrome mount plates, peg extension bars and O-Ring peg set.


VT No.	Year
27-0609	1952-81
27-0610	1982-84

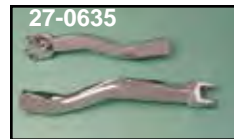

Chrome Foot Rest Support Bars Set. Right and left support bar set for use on all XL's with welded square insert on motor mount plate which has a filter for 1983-Early 84. **Foot Rest Support Bar** is a set of 2 for Hi-way Bars on FX-FXR's, 1977-up heavy duty and chrome 3/4" long.

VT No.	Item
27-0604	Support Bar Set
27-0635	Bar Set
27-1227	Peg Set
8851-4	Bolt Set
13-9185	Spring Washer
40-0301	Engine Mount with filter

Rear Footpeg Mount for XL

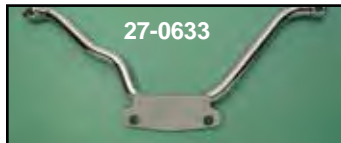

VT No. 27-0634 Shown on motorcycle

Chrome Rear Footpeg Brackets bolts to rear motor mount bolts, for use on Rigid or Swing Arm frames.

VT No.	Fits
27-0633	1957-78 Sportster, uses large female Driver pegs 27-1215, 27-1220 and 27-1581
27-0634	1982-90 XL use 27-1227 Small Male Pegs
27-0631	1957-81 except 1979 use 27-1227 Small Male Pegs



Rear Passenger Footpeg Mounts (D) Replaces 50610-86 on 1986-2003 models, to mount rear passenger pegs to swing arm. Choose pegs to complete or order kit.

VT No.	#	Item
27-1686	C-A	Kit
27-1685	C-B	Kit
27-1687	C-D	Kit
27-1561	C	Mounts Only



Chrome Passenger Peg Mount Bracket Sets Only.

VT No.	Item
27-1564	2004-13
27-0485	2014-up