



1965-84 FLH Passenger Footboards



Rear Footboards are passenger type, chrome steel. Attach by sliding into lower frame tube & bolting to same. Fit 1968-84 FLH.

- VT No. Item**
27-1532 Footboard Set
28-0420 Passenger Footboard Mats

1977-84 FLH Passenger Footboard Kit includes brackets and chrome boards with rubber pads.



- VT No. Item**
27-0618 Kit
27-0856 Adapter Stud



FLH Passenger Footpeg Brackets are fully adjustable for 1977-84 FLH.

- | VT No. | OEM | Side |
|---------|-----------|-------|
| 27-1578 | 52686-77A | Right |
| 27-1579 | 52690-77A | Left |
| 27-1592 | Chrome | Set |
| 27-0064 | Polished | Set |

Early Footboard

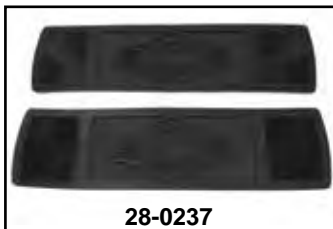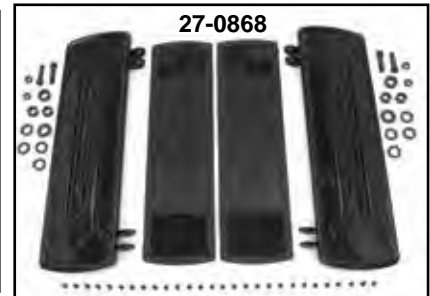

Early Square Type 1914 Footboards fit 1941-85 FL models. Rubber pads not included except with 27-0868.

- VT No. Item**
27-0901 Raw
27-0966 Black
27-0902 Chrome
28-0237 World's Fair Rubber Pads
27-0868 World's Fair Style
9886-12 Bolts
27-0757 Raw Cleat Set