



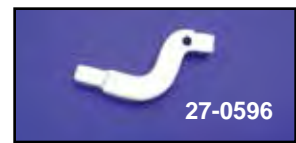

Footboard Bracket for 1965-84

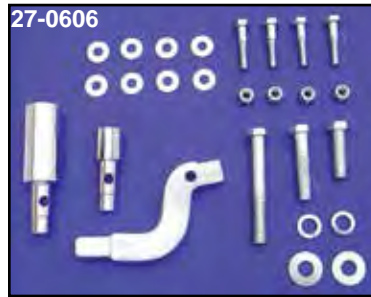

Footboard Mount Kit for aluminum primary models 1965-84 FL-FX, when using custom pipes, includes extended front footboard bracket for needed clearance.
VT No. 27-0599



Chrome Splined Footpeg Supports for FX-FL.

VT No.	Side/Item	Type	Image
27-0055	Right, Support	Straight	
27-0045	Right, Support	Offset	
27-1563	Right, Bracket	Plate	
42-0630	Left, Chrome Inspection Cover	With spline	
37-0155	Chrome Screws	For Above	
27-0046*	FXR Stud	With spline	
12-0201	Key for Above		

*Note: Stud is keyed for positive mount.

Aluminum Primary Footboard Mounting Kit fits Big Twin 1965-84 FLH-FXE models equipped with FL type forward controls and primary cover with footboard tab.

VT No.	Item	Fits
27-0606*	Complete Kit	
27-0636	Stud, short	Right
27-0596	Rear Bracket	Right
27-1621	Front Stud, zinc	Right


*Note: Includes extended rear footboard bracket when using custom drag or muffler pipes.

Rear Footboard Brackets fit 1970-84 FLH, 31-0098 is for use with drag or custom pipe sets when footboards are used. Zinc plated.

VT No.	Type
27-0596	Stock
31-0098	Custom Drag Pipe




1936-57 Rigid

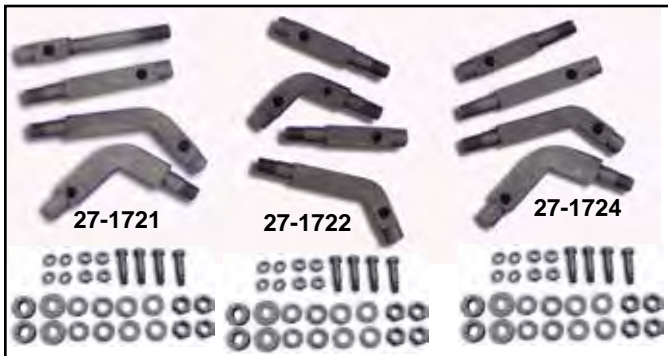


Replica Footboard Mount Bracket Kits include four brackets and related mount hardware for Big Twins.

VT No.	Fits
27-1722	1936-54 Rigid
27-1724	1955-57 Rigid
27-1721	1958-64 Swingarm




Footboard Tabs can be welded on 1936-84 Big Twins. Available in stamped or authentic forged steel construction for custom or stock frames. Sold in pairs.

VT No.	Dia.	Type
27-1560	1 1/8"	Forged, exact
27-0311		Stamped tabs
27-0664	1"	Forged, exact




Footboard Bracket Stud Nut and Washer Kits, parkerized. Fits 1936-57 Big Twin
VT No. 9905-16

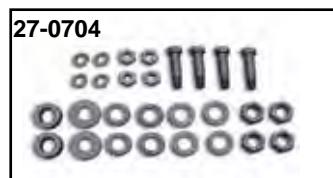

Footboard Mount Bracket Kit fits 1936-64 Big Twin models with stamped steel primary. 5 Piece Kits include both brackets for mechanical or hydraulic brake models.

VT No.	Finish	Years	Pieces
27-0605	Chrome	1936-64	5
27-1702	Parkerized	1936-64	5
8773-12*	Cadmium	Bolt Set, Hex	
9685-12*	Parkerized	Bolt Set, Hex	
9886-12*	Parkerized	Bolt Set, Slot	
27-0704	Parkerized	Bolt Set, Hex	

*Note: Mounts footboards to brackets

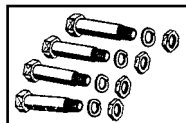

Footboard Bolt Set. Four piece set of hinge bolts with nuts. Replaces 50635-14.

VT No.	Type
8773-12	Cadmium
9685-12	Parkerized
2125-12	Zinc