



LEATHER Early Solo

Solo Seats on this page measure 16" x 16" and feature replica steel ribbed baseplate, genuine leather cover.



47-0247



47-0128

P

Early Solo Seats feature thin profile on steel ribbed baseplate. The edges are ground as original, replaces 3181-25.

VT No. Color

47-0247 Brown

47-0128 Distressed Brown

47-0061 Brown (Thin)

P= Police Solo Size



Corbin-Gentry Leather Solo and Buddy Saddles are built on a replica style steel ribbed baseplate with brackets riveted in place. Original style seams are accomplished by riveting a leather strip to the seat pan and form fitting the leather cover to strip and sewing for authentic construction.



47-0529

P



47-0555

Army Style Solo Saddle features replica stock style ribbed baseplate, Leather and rivets as original. Replaces 3181-41. Order mount hardware separately.

VT No. Item


47-0529 Brown Seat

47-0555 Black Seat

31-0587 Mount Hardware



31-0587

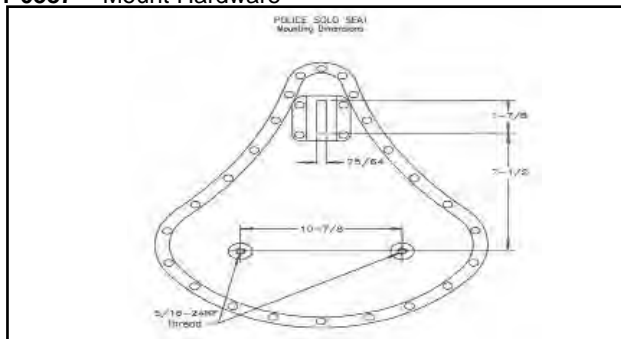

47-1938

Early Solo Seat feature OEM style pan without vent holes. Full leather construction as original.

VT No. Color

47-1938 Brown

47-0948 Black Leather Thin



47-0509

P



47-0607

P

Replica Leather Solo Seat as installed on the "Fireman Bike."

VT No. Color

47-0509 Dark Brown

47-0607 Bomber Brown



47-0783



47-0784

Black Leather Deluxe Solo Seat Kit includes leather solo seat, seat post and seat tee.

VT No. Fits

47-0783 BT

47-0784 45