





Auxiliary Seat Spring

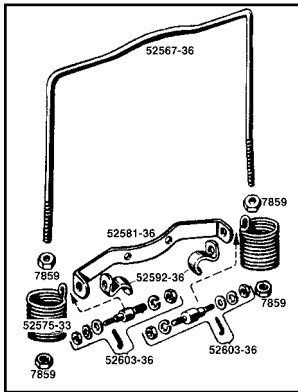

Auxiliary Spring Assembly includes parts pictured for 1936-57 Big Twin rigid frame. Order the Spring Clip Kit and spring hook separately.



VT No.	OEM	Item
31-3999	52560-36	Complete Assembly, 1936-57 Big Twin
31-4061	Chrome	Complete Assembly, 1936-57 Big Twin
13-9198	52575-33	Spring, Chrome, pair
13-9209	52575-33	Spring, Black, pair
31-3997	52581-36	Support Bracket
31-3996	52592-36	U Clamp, pair
31-3995	52603-36	Mount Stud, pair
31-0408	52588-38	Yoke Hook Set
	73341-36	1936-57
31-0198	52586-36	Yoke Hook, Chrome
31-0454	52586-36	As Above, Parkerized
31-3998	52567-36	Yoke
31-1311	52567-36	Yoke, Chrome
37-0862	7859	Nut, Four Piece
49-1744	—	Chrome Cups
49-0449	—	Dome Cover Set
31-0934	—	Seat Spring Yoke Bar W 1930-1952

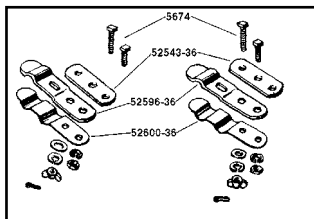

Auxiliary Spring Clip Kit includes 2 of each part listed 52600-36, 52596-36, 52543-36, and bolts and wing nuts for clipping spring yoke to bottom of buddy seats.

VT No. 31-3990



42-1375

Chrome Frame Cover include hardware as for Big Twin frames.



VT No.	Year	Type
42-0322	1936-57	Rigid, stainless
42-1375	1958-64	With seat post
31-9982	1958-80	Frame Cross Stud



Chrome Front Solo Seat Mount Kit. Fits 1986-up FXST.
VT No. 31-0819



Black Seat Post and T Kit fits 1936-52.
VT No. 31-0977

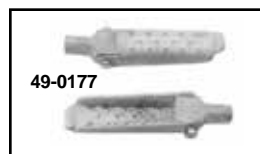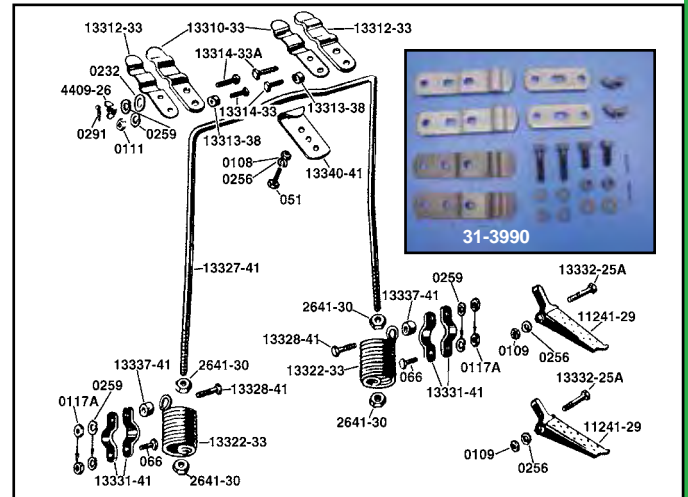

49-0177



13-9198




13-9209

45 Auxiliary Seat Spring Kit includes black finished parts with chrome springs. Order spring clip kit and spring hook separately.

VT No.	OEM	Item
31-3973	52562-33	Complete Assembly includes yoke bar, chrome springs and clamp set.
13-9198	52575-33	Chrome Springs
13-9209	52575-33	Black Springs
31-3972	52579-41	Frame Clamps, Four Piece
31-3958	52565-41	Spring Yoke Bar
Order Related Parts Separately		
31-0407	52585-41	Spring Hook
31-3990	52600-36	Spring Clip Kit
49-0177	52652-29	Rear Peg Set, Parkerized
27-1454	—	Peg Yoke Set

Auxiliary Spring Assembly Kits Are Used With Seat Tee Bars for All Buddy and Police Size Solos.

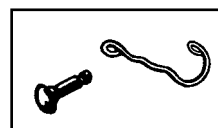

VT No. 8623-2



VT No. 31-0177



VT No. 31-0198



VT No. 31-0407
Buddy Seat Hardware



VT No. 31-0408

VT No.	OEM	Item/Finish
8623-2	51918-29	Clevis pin with Spring
31-0177	52551-36	Front Bracket, Cadmium
31-0198	52586-36	Spring Hook, Chrome
31-0454	52586-36	As above, Parkerized
31-0408	52588-38	Spring Hook Set
	52887-36	1936-57, Parkerized
31-0407	52585-41	1941-52, 45 Solo
31-0156	—	3 hole Under Fender Mount Strip
31-1283	—	Seat and Hook Only