




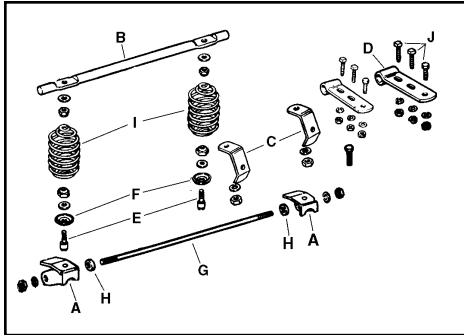

Auxiliary Seat Spring Kit

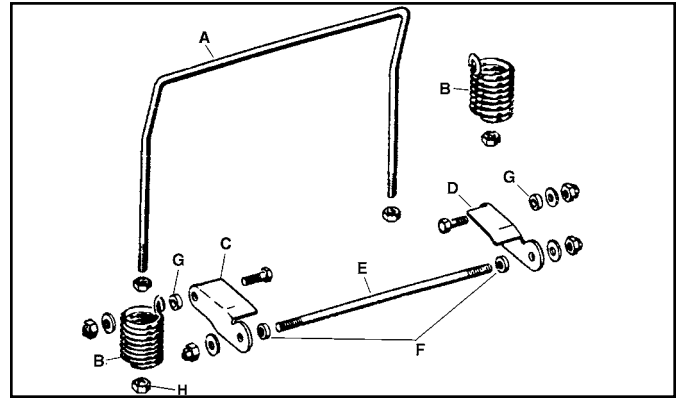


Auxiliary Spring Kit adapts to all plunger mounted buddy seats for extra weight Capacity. Includes all parts pictured to fit 1965-84 FLH frames. Zinc plated with chrome springs.

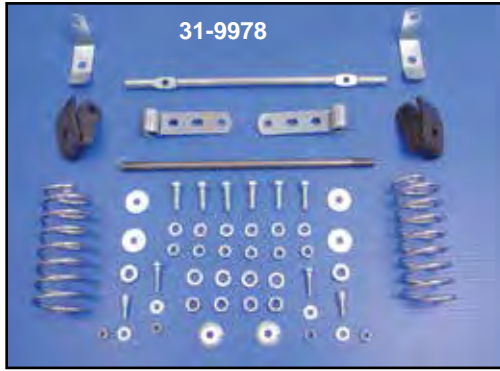



Auxiliary Spring Bracket Assembly fits 1958-64 Big Twins, order 31-3990 clip kit and hook separately.

VT No.	#	OEM	Item
31-9978	All	Complete	Kit
31-9967	A	52583-68 52584-68	Bracket Left Bracket Right
31-9968	B	52566-65	Bar
31-9969	C	52586-68	Spring Bracket (2)
31-9970	D	52596-65	Yoke (2)
37-8800	E	52608-68	Shoulder Bolt (2)
	F	52609-68	Cup Washer (2)
31-9982	G, H	52605-65 52605-68	Stud with Spacer
13-9174	I	52575-65	Spring, pair, chrome
37-8792	H	52605-58	Spacer Nut (2)
37-0510	J	5667	Square Head Bolt

VT No.	#	OEM	Item
31-0427		Kit	Complete
31-0429	A	52567-58	Spring Yoke
13-9240	B	52575-58	Spring Set, Chrome, pair
31-0428	C	52581-58	Right Support Bracket
	D	52582-58	Left Support Bracket
37-9110	E	52602-58	Stud Spring Mount
37-8792	F	52605-58	Support Stud Nut
37-9111	G	52606-58	Spring Support Spacer, pair
37-0862	H	7859	Nut, Black
37-0871	H	7859	Nut, Chrome

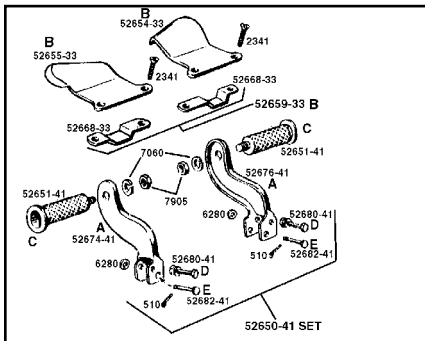

Buddy Seat Foot Rest Brackets mount to existing footboard brackets on 1936-64 Big Twins. Pair replaces 52674-41 and 52676-41.

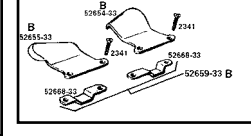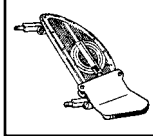

Footboard Extension Pads clamp on 1914-65 footboards.

VT No.	Finish
49-2556	Parkerized
49-2557	Chrome



Footboard Hinge Bolt (Buddy Footrest Bolt) Kit includes reproduction of special shoulder bolts, pins and bushings used to mount floor boards on 1941-64.

VT No.	Finish
8774-18	Cadmium
9722-18	Parkerized

VT No.	#	Item
27-1628	A	Chrome Brackets
27-1629	A	Black Brackets
49-2556	B	Footboard Pad, Parkerized
49-2557	B	Footboard Pad, Chrome
8774-18	D & E	Bolt Set, Cadmium
9722-18	D & E	Bolt Set, Parkerized
27-1676	C	Peg Set with Rubbers, Zinc
27-1680	C	Peg Set with Rubbers, Chrome
28-2127		Rubbers only



Rear Foot Rests include rubbers. Fit 1936-64 foot rest brackets.

VT No.	Finish
27-1676	Zinc
27-1680	Chrome
28-2127	Rubber Only



Complete Buddy Footrest Kit.
VT No. Finish
27-1252 Black
27-1253 Chrome